

USE AND MAINTENANCE MANUAL OF SCREENLINE INTEGRATED BLIND SYSTEMS

SL20W VENETIAN / SL22W VENETIAN / SL27W VENETIAN / SL29W VENETIAN / SL32W VENETIAN

SL20W PLEATED / SL22W PLEATED / SL27W PLEATED / SL29W PLEATED / SL32W PLEATED

SL27W PLEATED BLACK-OUT / SL29W PLEATED BLACK-OUT / SL32W PLEATED BLACK-OUT

USE

Refer to the User's manual provided in the box of Battery module SL2380

MAINTENANCE

The blind is maintenance-free. For accessories (battery module, remote control, etc.), refer to the User's manual provided in the box of Battery module SL2380