

USE AND MAINTENANCE MANUAL OF SCREENLINE INTEGRATED BLIND SYSTEMS

SL20S PLEATED / SL22S PLEATED

USE

To raise or lower the fabric, slide the control device upwards or downwards until reaching the desired position.

MAINTENANCE

BLIND:

Maintenance-free.

SLIDER:

Clean with mild soaps or detergents. If the slider comes free from the glass, slightly draw it nearer the glass, so as to match the magnetic control device located inside the blind. Make sure the slider has the same polarity as the internal magnet's: in case the poles do not match, the slider will be rejected by the magnetic force and a 180° rotation will be necessary in order to apply it on the glass.